

LARGE METAL BALL WINDER GEAR REPLACEMENT


STEP 1.

Aquire a 10 mm
socket wrench.



STEP 2.

- Remove the nut affixed to the top smaller gear.
- Store the washer and nut in a safe location.

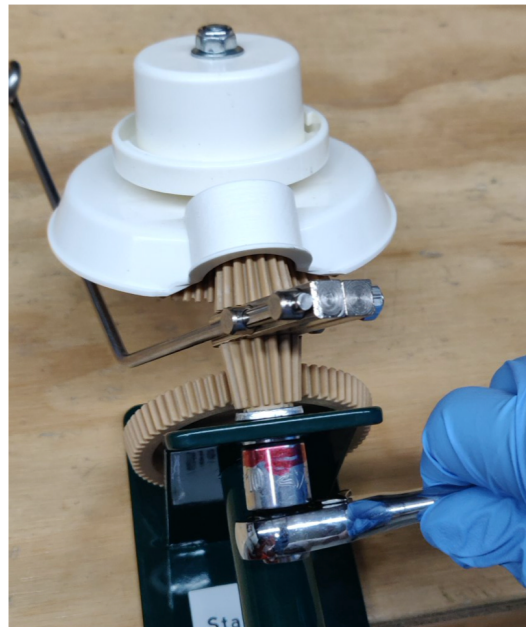


STEP 3.

- Remove washer from top gear set assembly, then remove and replace the small gear.
- Re-attach washer.




STEP 4.

- Loosen nut from winder base.
- Take out the washer and store it in a safe location.

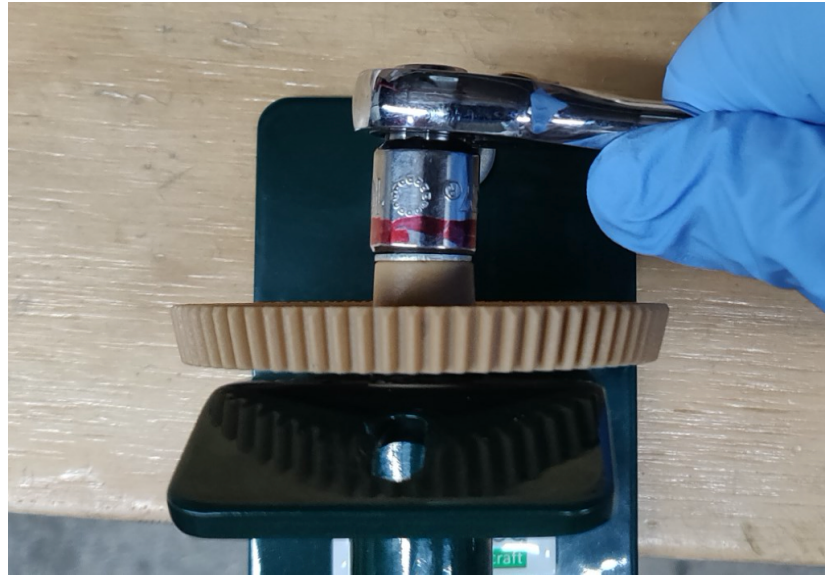


STEP 5.

- Pull main gear by the gear handle.
- Take out washer and store it in a safe location.

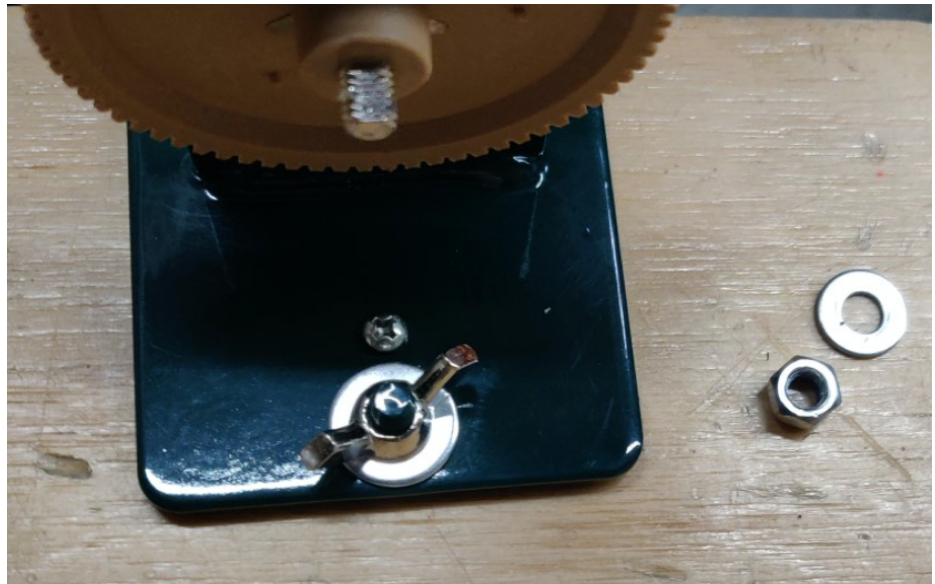


STEP 6.

- If you are unable to remove the main gear, you will need a rubber mallet.
- Gently tap on the threaded end until the handle comes loose, too much force will damage the handle and gear assembly.

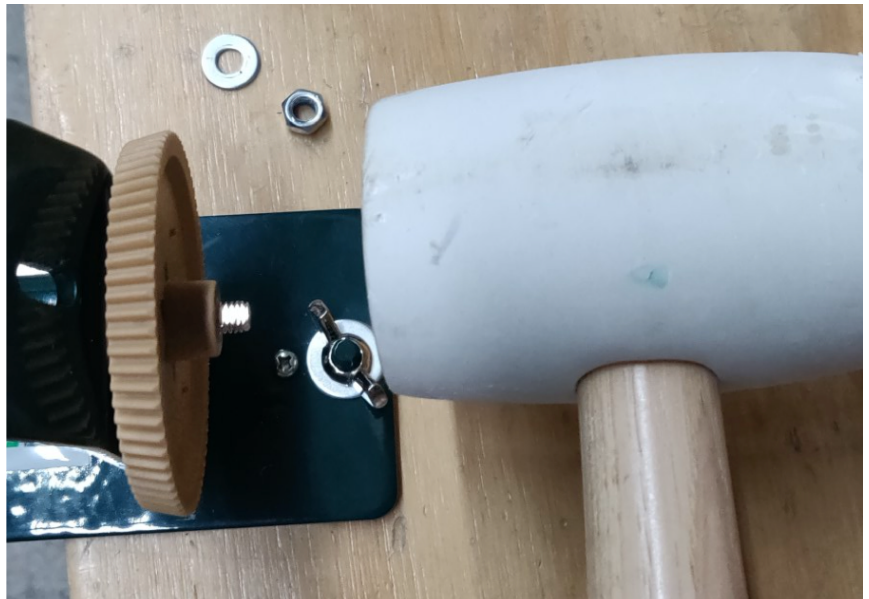

STEP 7.

Replace the main gear and follow the steps in reverse order to reassemble. (6 -> 5 -> 4 -> 3 -> 2)

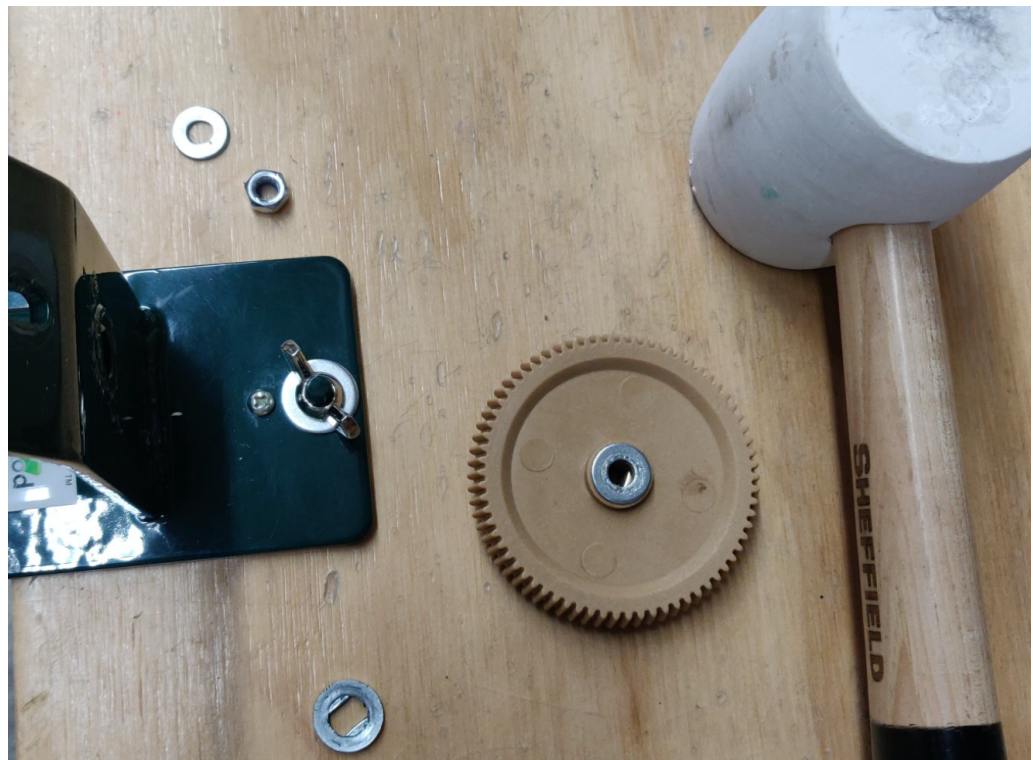

ANY QUESTIONS PLEASE CONTACT US AT:
stanwoodimports@yahoo.com
sales@orientalhomegarden.com

Tel: (888) 670-5570

Copyright © Stanwood Imports / Oriental Touch LLC

