

REPLACING WIND SCULPTURE CWS-01,-02,-03,-01L,&-02L BEARINGS


STEP 1.

Disassemble the blade with the faulty bearing.




STEP 2.

Use a retaining ring plier to remove the C-shaped retainer.

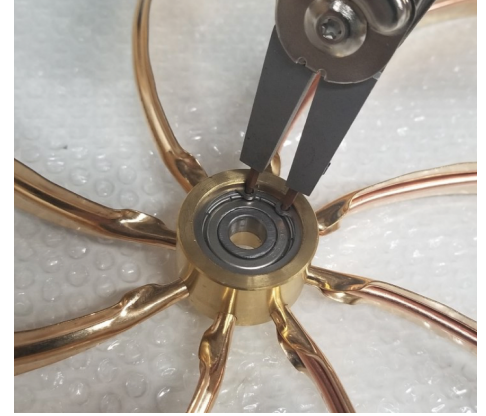


STEP 3.

Remove retainer.

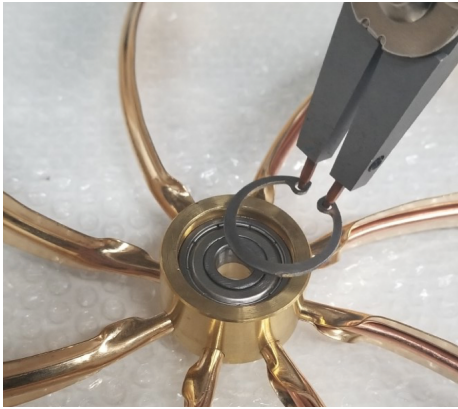


STEP 4.

Flip the blade over to the other side.

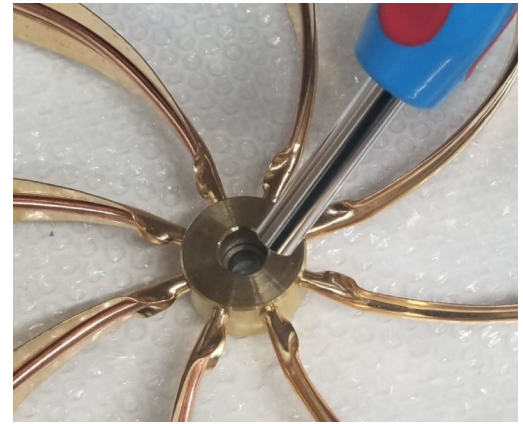

STEP 5.

Lightly tap out the bearing with a screw driver, preferably with the screw bit and a hammer.

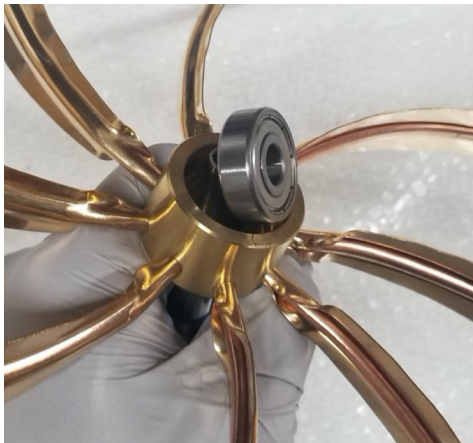

STEP 6.

Push the new bearing into place using both thumbs on opposite sides. Put the retainer back with **Steps 3 & 2**, respectively.



ANY QUESTIONS PLEASE CONTACT US AT:
stanwoodimports@yahoo.com
sales@orientalhomegarden.com

Tel: (888) 670-5570

Copyright © Stanwood Imports / Oriental Touch LLC

