

HOW TO ASSEMBLE YOUR STANWOOD HUMMINGBIRD FEEDER



Parts



Step 1

Place the brass washer over the threaded end
Turn over the ant moat and insert the threaded end of the hook.

Place silicone ring over the threaded end.

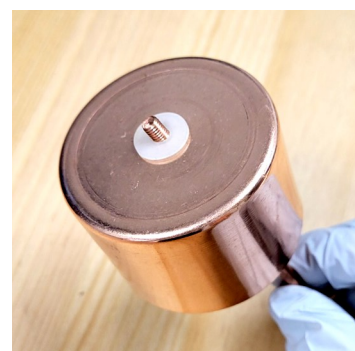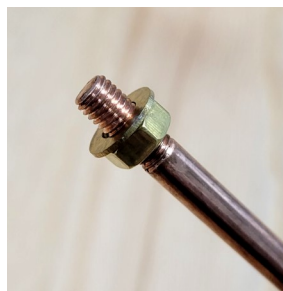

Step 2

Align the thread with the threaded hole on the basin and hand tighten the connection



Step 3

Fill the basin with nectar or sugar water and place the cover over the basin

Fill the ant moat with water



* NOTE *

Hummingbirds are picky eaters, nectar / sugar water will need to be replaced every 3 days.
To mix sugar water, please use 1 part sugar to 4 part water by weight.
Please check and top off the ant moat to prevent ant infestation.

ANY QUESTIONS PLEASE CONTACT US AT:

service@stanwoodimports.com

sales@orientalhomegarden.com

Tel: (888) 670-5570

