

WIND SCULPTURE MAINTENANCE- CLEARCOAT APPLICATION


STEP 1.

- Acquire **Rust-Oleum (Crystal Clear Enamel)**
Or Permalac (Original Clearcoat Lacquer Satin).



STEP 2.

- Clean any area that will be protected by the clear-coat with rubbing alcohol. Towel dry then air dry immediately.
- Cover up ball bearing parts if applicable.

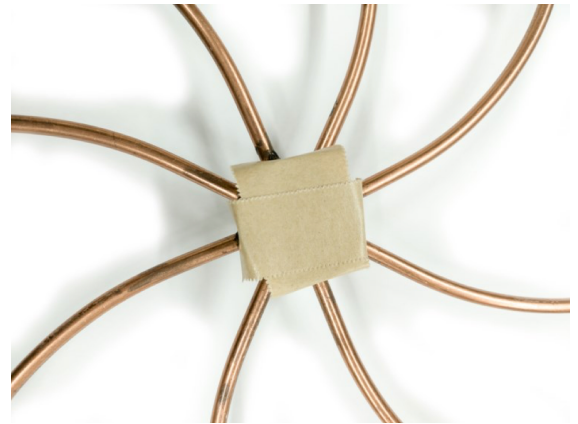

STEP 3.

- Evenly coat the blades, wait for 30 minutes or more for 1st layer to dry.
- Evenly apply the 2nd layer and allow it to dry overnight.
- Re-apply occasionally depending on the rain/weather conditions in your area.



ANY QUESTIONS PLEASE CONTACT US AT:
stanwoodimports@yahoo.com
sales@orientalhomegarden.com

Tel: (888) 670-5570

Copyright © Stanwood Imports / Oriental Touch LLC

