


RAIN CHAIN REDUCER INSTALLATION


STEP 1.

Lower the hanging wire to a lying down position.

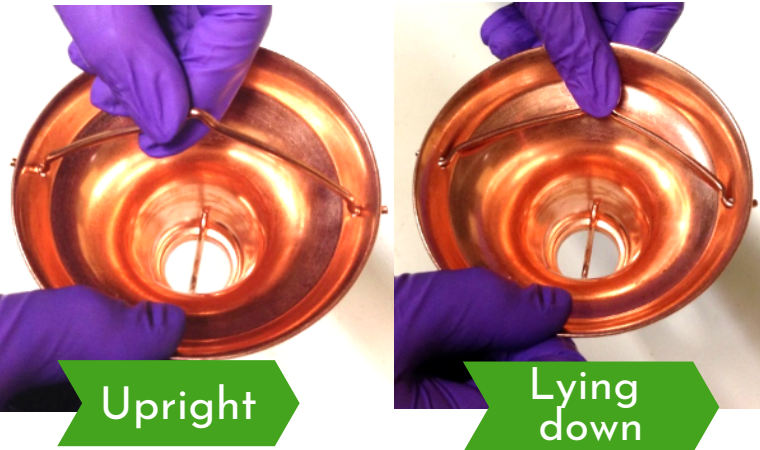


STEP 2.

With the wire still lying down, pull one end of it out of the hole.

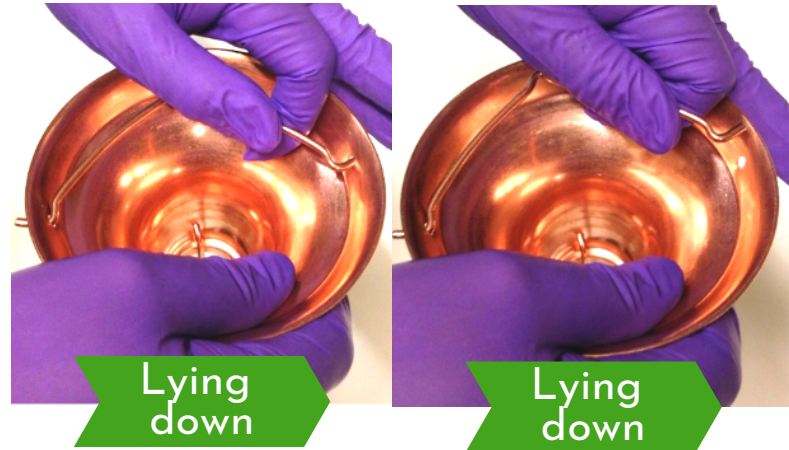


STEP 3.

Connect the reducer to a V-shaped hook (not included, comes with rain chain order). Secure the loose end back to its hole while the wire remains lying down.

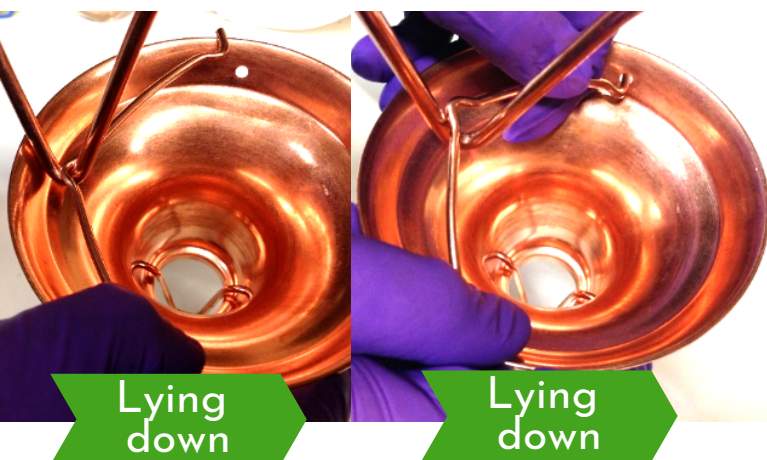

STEP 4.

Lift the wire to its upright position. Pull at both ends and away from the center to further secure the wire. Hook the rain chain to the bottom of the reducer.

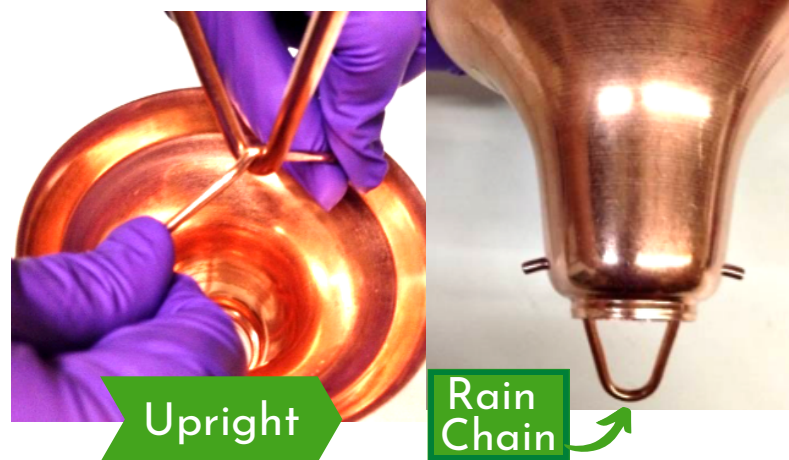

ANY QUESTIONS PLEASE CONTACT US AT:

stanwoodimports@yahoo.com
sales@orientalhomegarden.com

Tel: (888) 670-5570

Copyright © Stanwood Imports / Oriental Touch LLC

