

Stanwood® Wind Sculpture CWS-01 -02 -03 -01L -02L Assembly Instruction

Installation: Pole Anchoring


Step 1

Gather these parts, one pole with beveled edge, three support stakes.



Step 2

Hammer the main pole into the ground using a **Rubber Mallet** until the black line touches the ground (about 1 ft. deep).

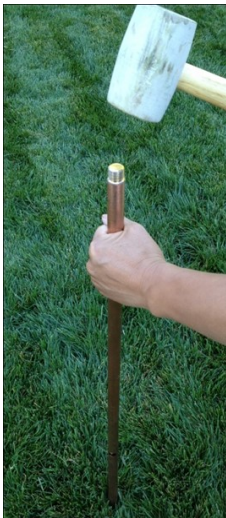

Step 3

Slide a support stake into the main pole and hammer it into the ground.



Step 4

Slide a second support stake into the main pole. Position it ~120° degrees away from the first stake and hammer it into the ground.



Step 5

Slide a third support stake on to the main pole. Position it evenly away from the first two stakes and hammer it into the ground.



Installation: Wind Sculpture

Step 6

Connect two sections of the pole together.




Step 7a


Mount spinner wheels onto the T-shaped shaft with the **exposed side of the bearings facing away from the T shaft.**



Step 7b

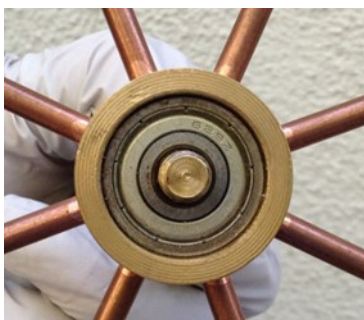


Correct

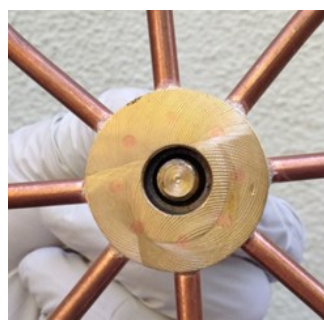

Incorrect

Step 8

Fix the wheels with provided mushroom ball screws to both ends of the T shaft. **Hand tighten as much as possible.**

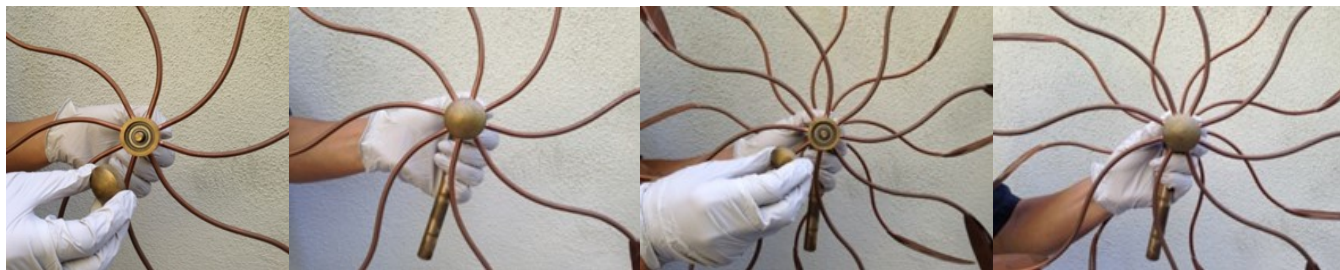

Step 9

Slide spinners into the pole



Still Need Help?

Please contact us at
stanwoodimports@yahoo.com
 or
sales@orientalhomegarden.com
 or
 scan the QR code

